

2006	Volvo	FM 440 4x2	D13A440	600 ± 50	2070 ± 50	0,76	1,03	89+3 / 1800	
2006	Volvo	FM 440 6x4							
2006	Volvo	FM 440 8x4							
2006	Volvo	FM 480 4x2	D13A480	600 ± 50	2070 ± 50	0,84	1,13	89+3 / 1800	
2006	Volvo	FM 480 6x4							
2006	Volvo	FM 480 8x4							
2006	Volvo	FH 400 4x2	D13A400	600 ± 50	2070 ± 50	0,74	1,00	89+3 / 1800	
2006	Volvo	FH 400 6x2							
2006	Volvo	FH 400 6x4							
2006	Volvo	FH 440 4x2	D13A440	600 ± 50	2070 ± 50	0,76	1,03	88+3 / 1800	
2006	Volvo	FH 440 6x2							
2006	Volvo	FH 440 6x4							
2006	Volvo	FH 480 4x2	D13A480	600 ± 50	2070 ± 50	0,84	1,13	88+3 / 1800	
2006	Volvo	FH 480 6x2							
2006	Volvo	FH 480 6x4							
2006	Volvo	FH 520 4x2	D13A520	600 ± 50	2070 ± 50	0,84	1,13	88+3 / 1800	
2006	Volvo	FH 520 6x2							
2006	Volvo	FH 520 6x4							
2006	Volvo	VM 210 4x2	MWM5A206	750 ± 50	2650 ± 50	1,15	1,55	87+3 / 2200	
2006	Volvo	VM 210 6x2							
2006	Volvo	VM 260 4x2	MWM7A260	750 ± 50	2650 ± 50	1,15	1,55	90+3 / 2200	
2006	Volvo	VM 260 6x2							
2006	Volvo	VM 260 6x4							
2006	Volvo	VM 310 4x2	MWM7A310	750 ± 50	2650 ± 50	1,25	1,69	91+3 / 2200	
2006	Volvo	VM 310 6x4							
2007	Volvo	FM 400 4x2	D13A400	600 ± 50	2070 ± 50	0,74	1,00	89+3 / 1800	
2007	Volvo	FM 400 6x4							
2007	Volvo	FM 400 8x4							
2007	Volvo	FM 440 4x2	D13A440	600 ± 50	2070 ± 50	0,76	1,03	89+3 / 1800	
2007	Volvo	FM 440 6x4							
2007	Volvo	FM 440 8x4							
2007	Volvo	FM 480 4x2	D13A480	600 ± 50	2070 ± 50	0,84	1,13	89+3 / 1800	
2007	Volvo	FM 480 6x4							
2007	Volvo	FM 480 8x4							
2007	Volvo	FH 400 4x2	D13A400	600 ± 50	2070 ± 50	0,74	1,00	89+3 / 1800	
2007	Volvo	FH 400 6x2							
2007	Volvo	FH 400 6x4							
2007	Volvo	FH 440 4x2	D13A440	600 ± 50	2070 ± 50	0,76	1,03	88+3 / 1800	
2007	Volvo	FH 440 6x2							
2007	Volvo	FH 440 6x4							
2007	Volvo	FH 480 4x2	D13A480	600 ± 50	2070 ± 50	0,84	1,13	88+3 / 1800	
2007	Volvo	FH 480 6x2							
2007	Volvo	FH 480 6x4							